



Digitz & Pronto

-  **On/Read/Select Button** - Used to turn on the pager, to read messages and to select pager settings.
-  **Menu Button** - Used to scroll through the menu.

-
- Turning Pager On** Press the On Button once.
 - Turning Pager Off** Press and release the Menu Button until "OFF?" is displayed. Press the On Button once.
 - Incoming Page** Press any button to stop the alert. Press the Read Button to display the most current message. Your pager can store up to 16 messages.
 - Locking Messages** Press the Menu Button while reading message until "PROTECT" is displayed. Press the Select Button to lock the message. A maximum of 8 messages can be locked at any one time.
 - Setting the Time** Press and release the Menu Button until "SET TIME" is displayed. Press the Select Button. The hour field flashes. Press and release the Menu Button to adjust the hour. Follow the same procedure to set minutes and AM/PM. Press the Select Button to return to standby screen.
 - Changing Alert** Press Menu Button until "SILENT" or "AUDIBLE" is displayed.
 - Deleting Messages** Press Menu Button until "ERASE ALL" is displayed. Press the Select Button. All read, unlocked messages are deleted.