

# P900 Quick Card



- ☑ MailBox
- ℹ News/Info InBox
- ✉ Send Message
- 📶 Vital Signs
- ⏻ Power Off
- ↩ Message Reply
- 🔄 Reply in Progress
- ✖ Transmitter Off
- ✖ Delete Message/InBox
- ✓ Successful Reply/Send
- ✗ Unsuccessful Reply/Send
- 🔋 Low Battery
- 📧 MailBox Alert, News/Info Alert
- 📞 Alarm/Set Alarm
- 🕒 Set Time & Date
- 🔊 Alert Volume/Key Click, Reminder Alert
- 📧 InBox - Messages Read
- 🔊 Audible Alert/Alarm
- 🔊 Vibrate Alert/Quiet Mode
- 🕒 Private Time
- ✍ Signature

## Turning On Your Communicator

Open the flip and press any key to turn your communicator on. The communicator emits a 4-second power-up alert, and displays the Status screen.

Press **SYMBOL MENU / SPACE**, **ENTER**, **←**, **→**, **▲** or **▼** to display the Main menu.

## Turning Off Your Communicator

You should turn off your communicator to save battery power. The communicator receives any stored messages, once the unit is turned back on in the coverage area up to 96 hours.

Press	To Display	Then Press
▲ or ▼	⏻ Power Off	<b>ENTER</b>
▲ or ▼	○ Yes	<b>ENTER</b>

## Creating an Address Book Entry

Press	To Display	Then Press
▲ or ▼	📧 Address Book	<b>ENTER</b>
▲ or ▼	➕ New Entry	<b>ENTER</b>
Keyboard	Name	<b>ENTER</b>
▲ or ▼	Desired field	<b>ENTER</b>
Keyboard	Address/number	<b>ENTER</b>
Repeat	All desired fields	<b>ENTER</b>
▲ or ▼	📧 Save Entry	<b>ENTER</b>



## Composing a Message

Press	To Display	Then Press
▲ or ▼	✉ Send Message	<b>ENTER</b>
▲ or ▼	✍ Write Message	<b>ENTER</b>
Keyboard	Your message	<b>ENTER</b>

## Sending a Message

Press	To Display	Then Press
▲ or ▼	✉ Send Message	<b>ENTER</b>
	MESSAGE TRANSMITTING	

## Selecting the Address(es)

You can send a message to one or more addresses and to multiple addresses for the same addressee.

Press	To Display	Then Press
▲ or ▼	✉ Send Message	<b>ENTER</b>
▲ or ▼	○ Yes	<b>ENTER</b>

## Sending a Custom Reply

Press	To Display	Then Press
<b>SYMBOL MENU / SPACE</b>	Message Options menu	
▲ or ▼	↩ Reply to Message	<b>ENTER</b>
▲ or ▼	✍ Custom Reply	<b>ENTER</b>
Keyboard	Type in your reply.	<b>ENTER</b>
▲ or ▼	✉ Send Message	<b>ENTER</b>
	MESSAGE TRANSMITTING	

## Setting the Font Size

Press	To Display	Then Press
▲ or ▼	☰ Preferences	<b>ENTER</b>
▲ or ▼	Aa Font Size	<b>ENTER</b>
▲ or ▼	aa Normal or AA Large	<b>ENTER</b>
	to select.	
	<b>ENTER</b>	
	again to save.	

## Sending a Custom Reply

Press	To Display	Then Press
<b>SYMBOL MENU / SPACE</b>	Message Options menu	
▲ or ▼	↩ Reply to Message	<b>ENTER</b>
▲ or ▼	✍ Custom Reply	<b>ENTER</b>
Keyboard	Type in your reply.	<b>ENTER</b>
▲ or ▼	✉ Send Message	<b>ENTER</b>
	MESSAGE TRANSMITTING	

## Setting the MailBox and the News/Info Alert

Press	To Display	Then Press
▲ or ▼	☰ Preferences	<b>ENTER</b>
▲ or ▼	📧 MailBox Alert	<b>ENTER</b>
	or	
▲ or ▼	ℹ News/Info Alert	<b>ENTER</b>
	for a list of available tones.	
▲ or ▼	Desired Alert tone	<b>ENTER</b>
	to select.	
	and	
◀ or ▶	Press <b>SYMBOL MENU / SPACE</b> to	<b>ENTER</b>
	sample the tones.	
	again to save.	

## MyAirMail

Send email to a name, not a number! When you register on our MyAirMail website. Log on to [www.MyAirMail.com](http://www.MyAirMail.com) where you can create a personal email address. Maintain a professional appearance with your personal address created within this site that acts just like a standard email address (ex. JaneDoe@MyAirMail.com.) If you do not wish to create a personalized address, all American Messaging customers are able to receive emails using their ten-digit pager number: 9725551212@myairmail.com.

For more product information and user manual visit us at

[www.americanmessaging.net](http://www.americanmessaging.net)