


1. Extract the Zip files from PF56aFLX.zip to the target location C:\ PF56aFLX (uncheck the use folder names box)
2. Copy ADVELITE.fil to the root of C (C:\)

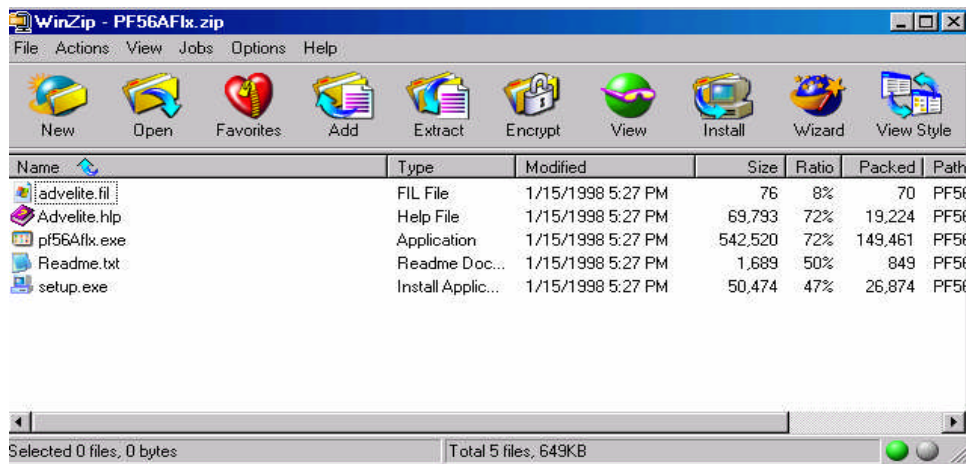

3. Run. PF56aFLX.exe from C:\ PF56aFLX A:\